





## Quick Point Live Centers, Dead Centers and Sets

- Accuracy guaranteed to  $\pm .00025$ .
- Interchangeable points reduce the need for several centers.
- Purchase individual replacement points or a complete set.
- Special points are available upon request.
- Mounting taper of points is 1:10.
- Safe storage container provided with a complete set.
- Point extractor for easy removal of points is included in the set or can be purchased separately.
- Optional C4T labyrinth bearing seal ([see page 4](#))

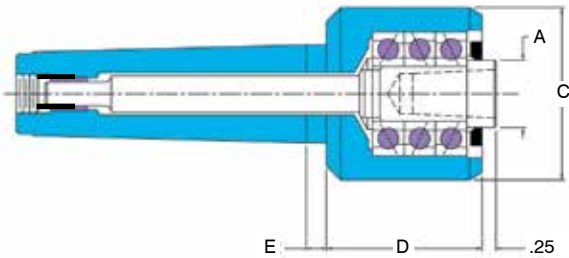

A Quick Point Set includes: one live center, one male point, one female point, one tracer point, one bull nose point, and one point extractor.

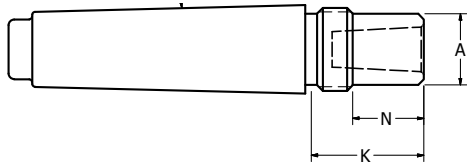

A Quick Point Set includes: one dead center, one tracer point, one bull nose point, one carbide tip point, one male point, one half point, and one point extractor.

LIVE CENTER*							
Model	MT	A	C	D	E	Max. RP	W. P. Weight
49102	2	0.98	2.13	2.00	0.38	5000	100
49103	3	0.98	2.13	2.00	0.37	5000	350
49104	4	1.38	3.07	2.78	0.36	5000	550
49105	5	1.57	3.07	2.78	0.36	5000	1400

\*Live Center includes male point unless otherwise specified.

CNC DEAD CENTER							
Model	MT	A	N	K	Threads	Nut	
68323	3	0.75	0.75	1.19	7/8 - 14	81031	
68324	4	1.00	0.75	1.44	11/8 - 12	81041	
68325	5	1.25	0.74	1.62	15/8 - 12	81051	
68384*	4	1.25	0.75	1.94	13/8 - 12	86041	
68385*	5	1.75	0.75	2.24	17/8 - 12	86051	

\* Special taper for Mazak machines  
Note: Dead center does not include a point.

### LIVE CENTER SETS

Model	Taper
49502	2
49503	3
49504	4
49505	5

### DEAD CENTER SETS

Model	Taper	Mazak
68303	3	-
68304	4	68394
68305	5	68395

### POINT EXTRACTORS

Model	Taper
49904	2, 3, 4
49905	5

